quick reference guide – MANO 16

EN

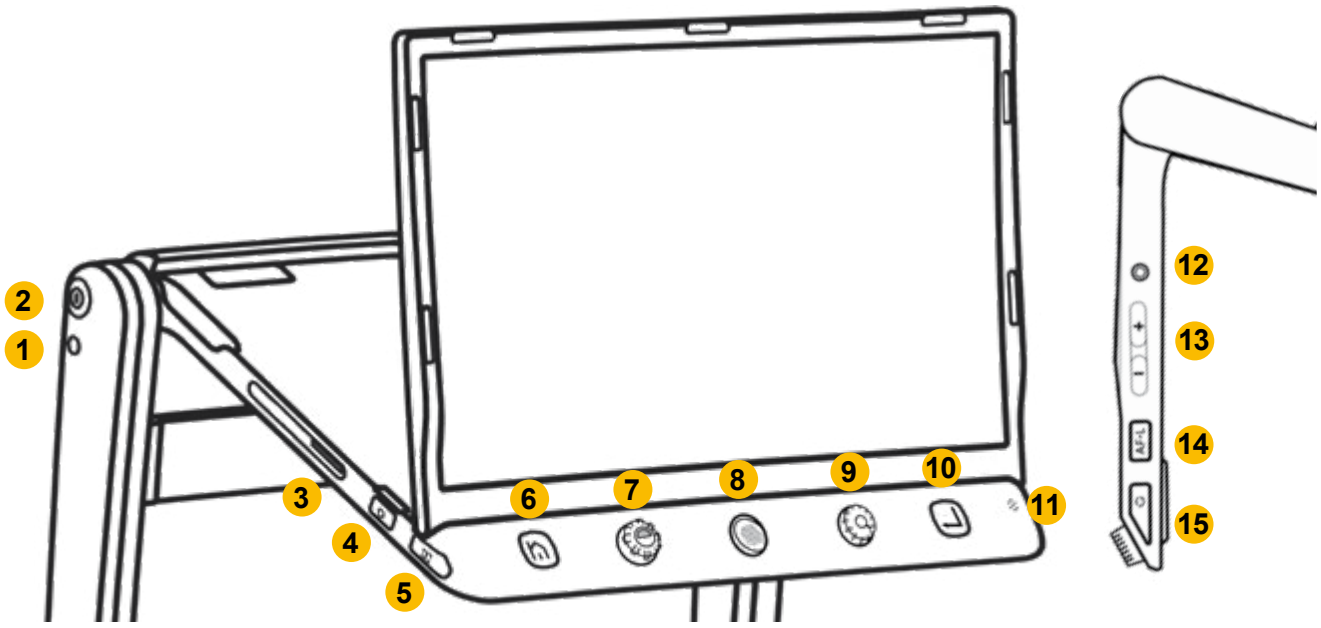

1) DC port
2) ON/OFF
3) SD card slot
4) gallery
5) line/mask button
6) home
7) color mode
8) joystick
9) zoom
10) enter
11) microphone
12) headphone / loudspeaker socket
13) volume +/-
14) autofocus
15) freeze frame

A Hold the base plate with one hand and unfold the stand

B Adjust the display to a comfortable viewing position

C Optionally raise it at the side and adjust it vertically

A



B



C



quick reference guide – MANO 16

Operation		
	short press: battery status	long press: switch ON/switch OFF/standby
	short press: show/hide menu bar	long press: open menu
	turn controller: change color mode	press controller: switch between true colors and artificial colors
	horizontal and vertical navigation in magnification mode; navigation within the picture gallery; adjust size and position of ruler and line masking	
	turn controller: zoom in/out	press controller: overview mode
	zoom in/out: use the pinch and zoom gesture	
	tap on the magnified image with your fingers and move it	
	short press: enter the gallery	
	short press: switch between line marker and mask	
	short press: freeze image	long press: save image
	short press: confirm selection	long press: multiple selection
	in menus and galleries: tap with your finger on an icon to select it	