Quick reference guide MANO XL

EN

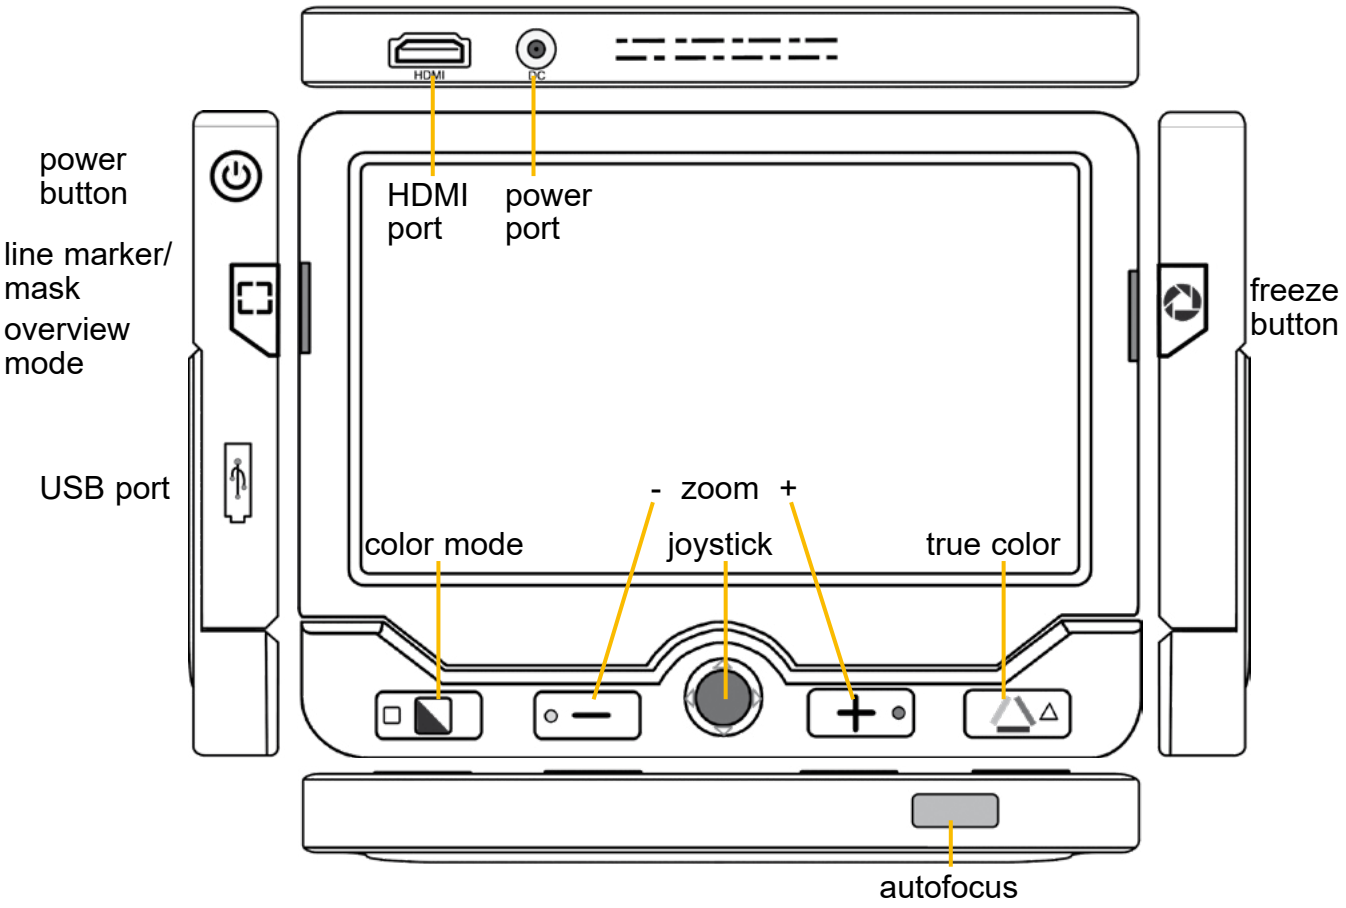

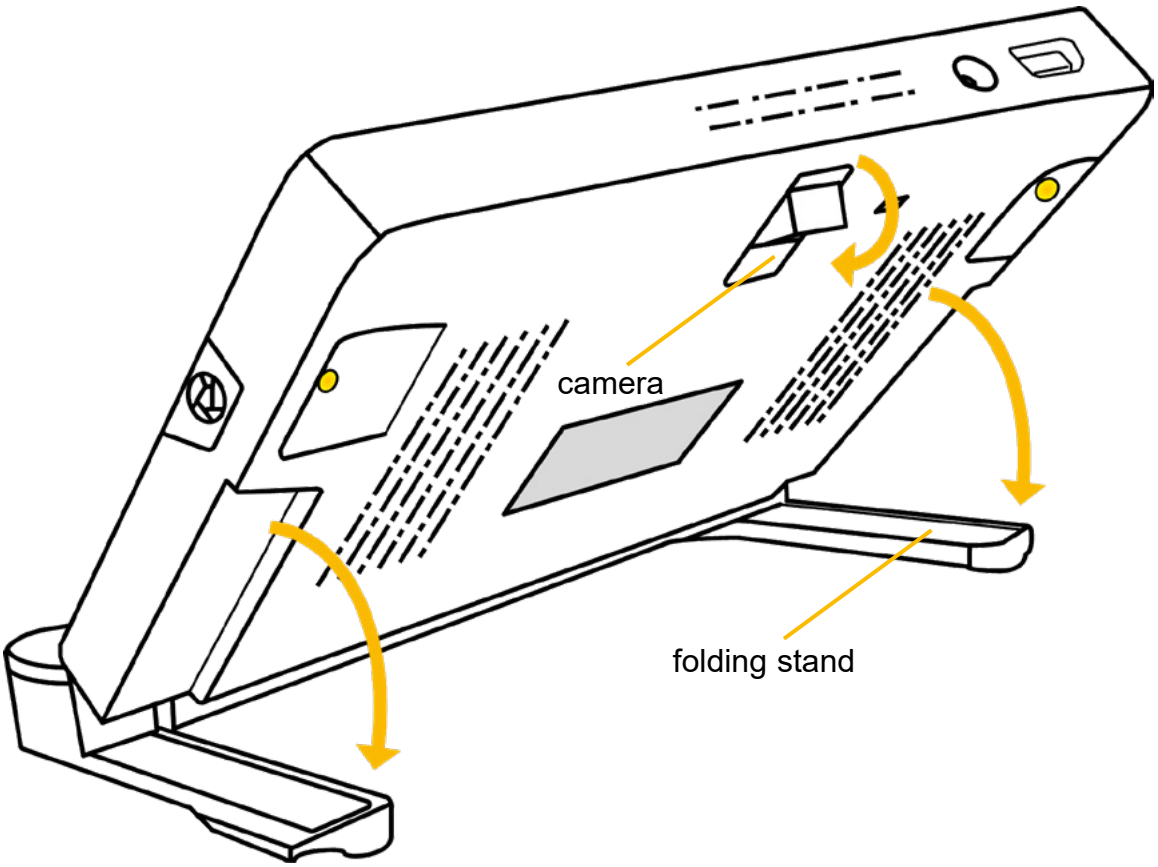

Quick reference guide MANO XL

Operation			
	short press button: internal menu / status	long press button: switch ON/switch OFF	
	short press button: change color mode	long press button: artificial color settings	
	short press button: true color mode	long press button: open gallery	
	short press button: zoom in in steps	long press button: zoom in continuously	
	short press button: zoom out in steps	long press button: zoom out continuously	
	short press button: freeze image	long press button: save image	
	short press button: switch between line marker and mask	long press button: overview mode (when in magnification mode)	
	horizontal and vertical navigation in magnification mode; navigation within the picture gallery; adjust size and position of ruler and line masking		
	short press button: autofocus ON/OFF		
image gallery			
	long press button: open/close gallery		left/right: navigate and select image up/down: next/previous page
	short press button: open selected image		close image/ back to the gallery
	in the opened image: go to next/previous image		
	short press: delete selected image press again: confirm deletion		long press: delete all images press again: confirm deletion
button combinations			
	increase/decrease screen brightness		
	increase/decrease contrast (in enhanced color mode)		
	LED lighting ON/OFF		
	switch between: lights all OFF / lights all ON / left light ON, right light OFF / left light OFF, right light ON		